



712977
RDN 1211020

Customer Support:
Service client:
www.oneforall-canada.ca
OFA warranty / terms & conditions:
Garantie OFA / termes et conditions:
www.oneforall-canada.ca

Imported into Canada by:
Importé au Canada par:
Universal Electronics BV –
Europe & International
P.O. Box 3332, 7500 DH Enschede
The Netherlands
www.oneforall.com

One For All is a registered trademark of Universal
Electronics BV
One For All est une marque déposée de Universal
Electronics BV

SAMSUNG® is a registered trademark of Samsung
Electronics Co., Ltd.
SAMSUNG® est une marque déposée de
Samsung Electronics Co., Ltd.

Industry Canada Regulatory Information
CAN ICES-3 (B)/NMB-3 (B)
Avis d'Industrie Canada CAN ICES-3 (B)/NMB-3 (B)

WARRANTY / GUARANTEE

WARRANTY / GUARANTEE INFORMATION

Terms and Conditions for "100% Guaranteed To Work" policy, and the separate 1 Year Limited Warranty against defects in material and workmanship can be found at www.oneforall.com/remotegarantee, or you may request hard copies via mail to UEI Technical Support Service, Suite 301, 26250 Euclid Ave., Euclid, OH 44132. Please include your full name, product information, and contact information in your request communication.

www.oneforall.com



GARANTIE / INFORMATIONS SUR LA GARANTIE

GARANTIE / INFORMATIONS SUR LA GARANTIE

Les conditions et modalités relatives aux règles "Fonctionnement garanti à 100%" et la garantie limitée de 1 an contre tout défaut de matériaux et de main-d'œuvre peuvent être consultés sur www.oneforall.com/remotegarantee, ou vous pouvez demander une copie papier en composant, ou par courrier électronique au service d'assistance technique UEI, Suite 301, 26250 Euclid Ave., Euclid, OH 44132. Veuillez inclure votre nom complet, les informations sur votre produit et vos coordonnées dans votre demande de communication.


www.oneforall.com

BATTERIES

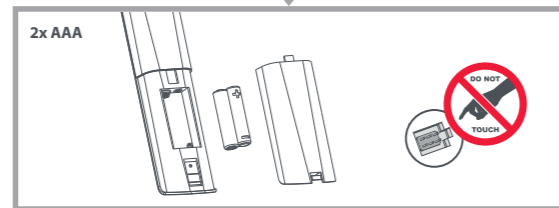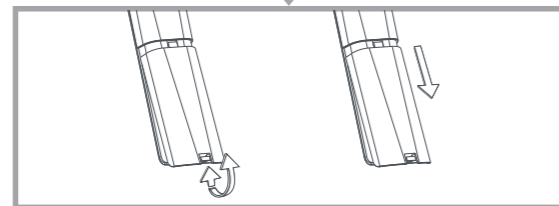

English: **CAUTION:** Risk of explosion if battery is replaced by an incorrect type. Use quality Alkaline batteries.

Français: **ATTENTION:** Risque d'explosion si les piles sont remplacées par un mauvais type de piles. Utilisez des piles alcalines / de qualité.

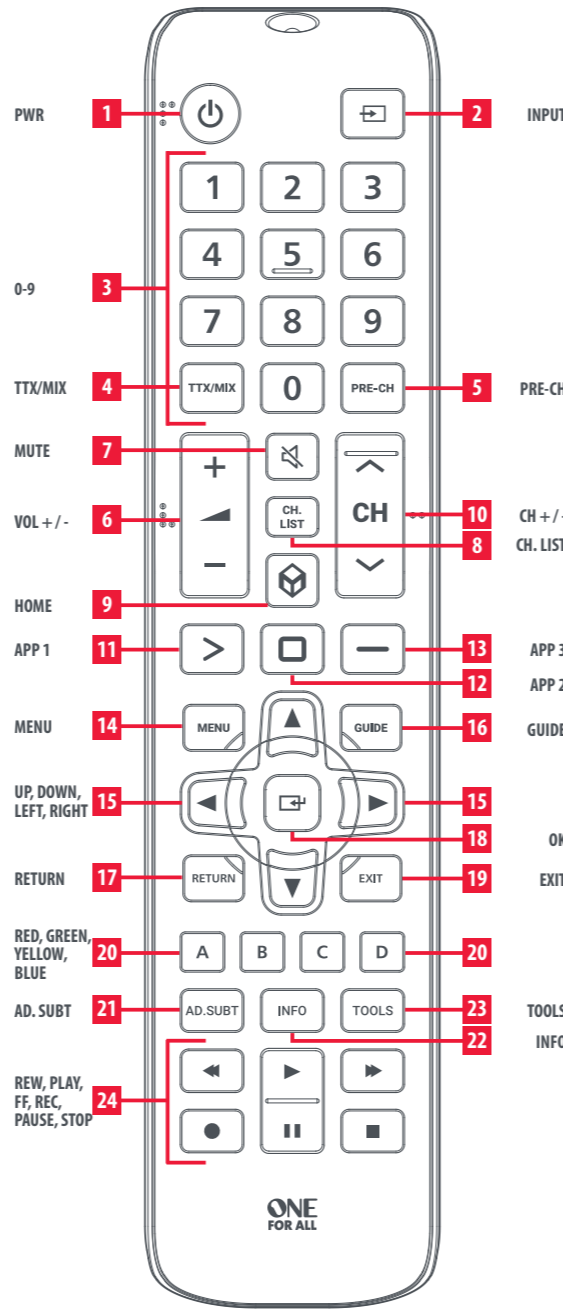

- 1** PWR Power Toggle
- 2** INPUT Input Select
- 3** 0-9 Digits for Channel Entry
- 4** TTX/MIX Teletext on and off
- 5** PRE-CH Previous Channel
- 6** VOL +/- Volume Up and Down
- 7** MUTE Mute
- 8** CH +/- CH. LIST Channel List
- 9** HOME Home, Smart Hub
- 10** CH +/- CH. LIST Channel List
- 11** APP 1 Rakuten TV / App Shortcut Key
- 12** APP 2 Netflix / App Shortcut Key
- 13** APP 3 Amazon Prime Video / App Shortcut Key
- 14** MENU Menu
- 15** UP, DOWN, LEFT, RIGHT Navigate the Menu
- 16** GUIDE Guide
- 17** RETURN Home, Smart Hub
- 18** OK OK
- 19** EXIT Menu Exit
- 20** RED, GREEN, YELLOW, BLUE Fastext, ABCD
- 21** AD. SUBT Subtitle, Audio Description
- 22** INFO Info, i
- 23** TOOLS Tools, Settings
- 24** REW, PLAY, FF, REC, PAUSE, STOP Playback control

ENGLISH

- PWR** Power Toggle
- INPUT** Input Select
- 0-9** Digits for Channel Entry
- TTX/MIX** Teletext on and off
- PRE-CH** Previous Channel
- VOL +/-** Volume Up and Down
- MUTE** Mute
- CH. LIST** Channel List
- HOME** Home, Smart Hub
- APP 1** Rakuten TV / App Shortcut Key
- APP 2** Netflix / App Shortcut Key
- APP 3** Amazon Prime Video / App Shortcut Key
- MENU** Menu
- UP, DOWN, LEFT, RIGHT** Navigate the Menu
- GUIDE** Guide
- RETURN** Back on level in the Menu
- OK** OK
- EXIT** Menu Exit
- RED, GREEN, YELLOW, BLUE** Fastext, ABCD
- AD. SUBT** Subtitle, Audio Description
- INFO** Info, i
- TOOLS** Tools, Settings
- REW, PLAY, FF, REC, PAUSE, STOP** Playback control

STEP 1: SET UP YOUR TELEVISION

THE MAJORITY OF NEWER SAMSUNG TV'S SHOULD WORK DIRECTLY. After putting batteries in, just test some of the keys, and if they work, your remote is ready. If not, follow the next steps:

- Make sure your TV is on (not on standby).
 - Hold down **Red + Blue** until the LED behind the **Power Key** blinks twice.
 - Point towards the TV and hold down the **Power key** until the TV turns off.
 - The remote will send a different Power signal every 3 seconds. As soon as the TV turns off, let go of the **Power key**.
 - The light will blink twice. Now test the rest of the keys on the remote, if they work as your original did, your remote is ready to use. If you find some keys do not work as expected (or at all), proceed to the next step.
- If you find some keys still do not work as expected (or at all), proceed to the next step.

ENGLISH

STEP 2: IF STEP 1 DOES NOT WORK AS EXPECTED

ARE SOME KEYS NOT WORKING AS EXPECTED?

If you find some keys do not work as expected (or at all), proceed to the next step.

- Make sure your TV is on (not on standby).
- Hold down **RED + BLUE** until the LED behind the **Power Key** blinks twice.
- Point towards the TV and hold one of the keys that is not working correctly (for example **Menu**).
- The remote will send a signal every 3 seconds.
- When the correct function is shown on the screen (in this case the Menu), let go of the key.
- The LED will blink twice - your remote is ready to use.

LEARNING

LEARN A NEW FUNCTION TO YOUR REMOTE

Your One For All remote can learn any function from your original (working) remote.



- Place the original remote facing the One For All remote on a flat surface.
- Hold down **GREEN + YELLOW** until the LED blinks twice.
- Press **975**. The LED will blink twice.
- Press the key on the One For All remote you want to learn on, for Example: the **VOL +** key. The LED will blink rapidly.
- Press the key on the Original remote you want to learn, for Example: the **VOL +** key of your Audio Device
- Two blinks:** ok. Repeat from step 4 for any more keys to learn. **Long blink:** try again from step 4.
- When you have learned all the keys you need, press and hold the **OK** key for 3 seconds. The LED will blink twice.

HOW TO DELETE A LEARNED FUNCTION

- Hold down **GREEN + YELLOW** until the LED blinks twice.
- Press **976**.
- Press the key to reset twice.
- The LED flashes twice and the key will revert to the original function.

ENGLISH

SOUND BAR / AUDIO RECEIVER VOLUME CONTROL

SOUND BAR / AUDIO RECEIVER VOLUME CONTROL

If you have your TV connected to a Sound Bar or Audio Receiver, it's possible to set up your One For All remote to control the Volume and Mute of this device. There are two ways to do this:

AUDIO SIMPLESET

If you have a Sound Bar or Audio Device from one of the brands listed in the table below, you can use the SimpleSet method to program your remote to control it. If you do not have one of the below brands, please proceed to the next section.

Digit	Brand
1	Bose
2	Denon
3	Samsung / Harman/Kardon / JBL
4	LG / JVC
5	Marantz / Philips
6	Onkyo
7	Panasonic / Technics
8	Pioneer
9	Sony
0	Yamaha

Note that each of the brands has a digit associated with it, for example 4 for LG (and JVC).

To set up your remote to control your Sound Bar / Audio Device, first make sure your TV and Sound Bar / Audio Device are both powered on, and that there is something playing that you can hear (this procedure will test the Mute function). Next:

- Hold down the **VOLUME UP** and **VOLUME DOWN** buttons together until the LED under the **POWER** key blinks twice.
- Now point the remote towards your Sound Bar / Audio Devices and hold down the digit key for your brand (for example 4 for LG). The remote will send the Mute function to your device every 3 seconds.
- As soon as your Sound Bar / Audio Device mutes the volume, release the digit key. The LED under the **Power** key will blink twice, and the Volume Up, Down and Mute keys should now control your Sound Bar / Audio Device.

AUDIO CODE SETUP

If your Sound Bar / Audio Device is not one of the brands listed above, you can also set up the remote to control it by entering a 4 digit code. The codes are listed in the Audio Codelist section of this manual, and are listed by brand and then popularity. Locate the brand of your Sound Bar / Audio Device in this code list and then the procedure is:

